



Qty: 1 *30TRI Trident Socket*


Step 1

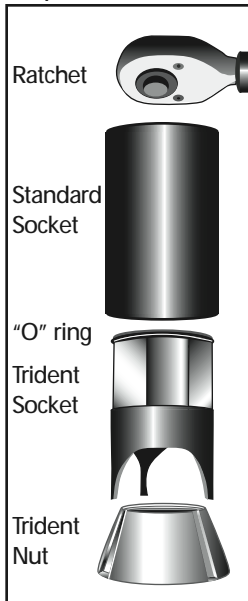

Step 2

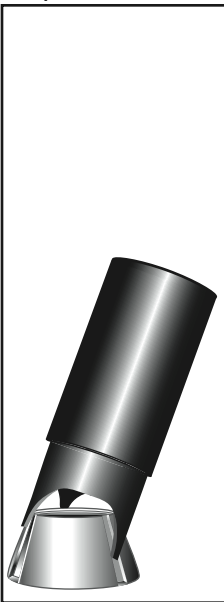

Step 3

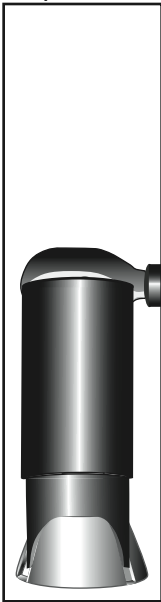

4302 Glenwood Rd.. Brooklyn, NY 11210

800 456-2658 Fax: 888 434-3215

718 434-4500 Fax: 718 434-3215 www.tannerbolt.com

Installation Instructions for 30TRI & 40TRI Trident™ Sockets

1. Fit standard 7/8" socket on to Trident socket
2. Align Trident Socket over Trident Nut
3. Angle two Trident socket prongs into wedge cuts on nut
4. Place all three socket prongs firmly on nut
5. Tighten with ratchet wrench

- Fits 7/8" socket (12 pt. standard or deep)
- "O" ring on trident socket holds standard socket firmly
- 30TRI fits nut sizes 5/16"-18, 3/8"-16 and 8mm
- 40TRI fits nut sizes 1/2"-13, 5/8"-11, 10mm
- Installs with standard drive ratchet
- Not to be used with an impact wrench